

Eufy angle mount installation guide

Adjustable angle mount from 20° to 50°

Follow the steps in this guide to install the angle mount, the original Eufy mounting plate and the doorbell safely and in the correct order.

Package contents

- Adjustable angle mount
- Drilling template
- 2 long screws and 2 wall plugs
- 2 small screws for the Eufy mounting plate

Tools required

- Pencil
- Drill with a 5 mm drill bit
- Suitable manual screwdriver
- Pointed tool for the drainage openings
- The original Eufy mounting plate



Safety

- Before drilling, check that there are no pipes or electrical cables behind the drill points.
- Use wall plugs and a drill bit that are suitable for the wall material.
- For a wired doorbell, disconnect the power completely before starting.
- Tighten the screws firmly, but do not overtighten them.
- Use a pointed tool carefully and always work away from your body.

Marking and drilling the holes

STEP 1


Mark the drill points



Position the drilling template vertically at the desired location. Hold it firmly against the wall and mark the centre of both holes with a pencil.

STEP 2

Drill both holes

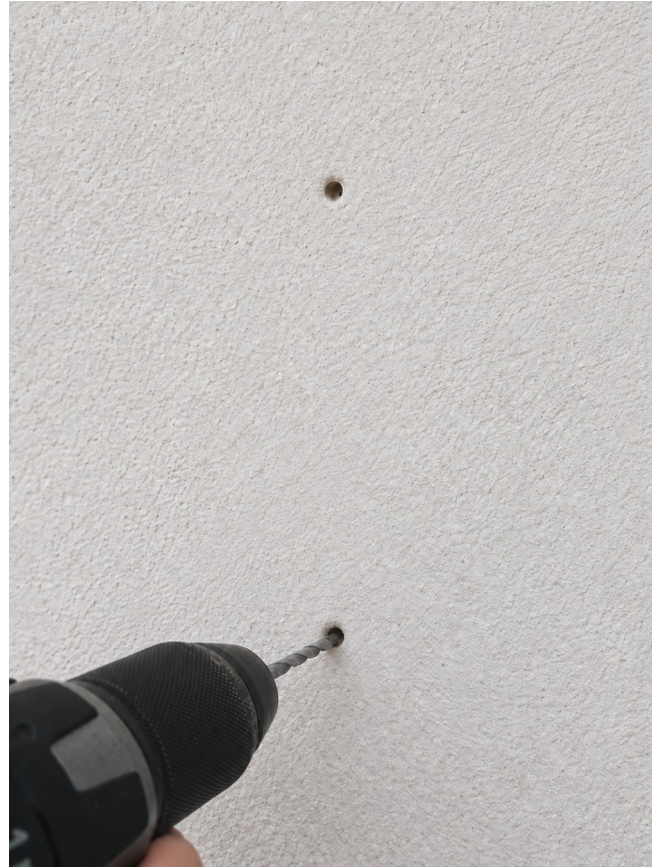

Remove the drilling template. Drill at both marks with a 5 mm drill bit to a depth of approximately 35 mm. Use suitable fixings for other wall materials.

Important

The drilling template sets the spacing between the screw holes. Do not move the marks after removing the template.

Attaching the angle mount to the wall

STEP 3

Insert the wall plugs



Push the wall plugs fully into the holes until they are flush with the wall. Use different fixings if the supplied plugs are unsuitable for the wall.

STEP 4

Secure the angle mount



Loosely fit the upper long screw first. Then insert the lower long screw, align the mount and tighten both screws evenly.

OPTIONAL — BEFORE STEP 4

Feed the wiring through



Disconnect the power. If existing doorbell wiring is present, feed the cable through the central opening in the angle mount now. Connect the wiring later according to the official Eufy instructions.

Adjusting the viewing angle and mounting plate

STEP 5

Set the viewing angle

Set the angle mount to the desired position between 20° and 50°. Check the viewing angle later in the Eufy app and readjust it if necessary.

STEP 6

Attach the Eufy mounting plate



Position the original Eufy mounting plate with the arrow pointing upwards. Attach it with the two small screws. Use a manual screwdriver and tighten the screws until snug.

Installing the doorbell and opening the drainage points

STEP 7

Click the doorbell into place



If applicable, connect the wiring according to the Eufy instructions. Position the doorbell on the mounting plate and press it firmly until it clicks securely into place.

STEP 8

Open the drainage openings



Carefully open the preformed drainage openings on the underside with a pointed tool. This allows any water to drain from the angle mount. Keep your fingers clear of the tool's path.

After installation

Check that the angle mount, mounting plate and doorbell cannot move. Check the viewing angle in the Eufy app and readjust the angle mount if necessary. For a wired installation, restore power only after completing these checks.

Need help www.reimech.nl